


- ＜ 系統 1(TAPE 再生) ＞
- ① 2 CD Deck (TASCAM RW-402)
  - ↓
  - ② MAIN-AMP ( CROWN D45 , CROWN D75A )
  - ↓
  - ③ SPEAKER ( JBL 4348 )

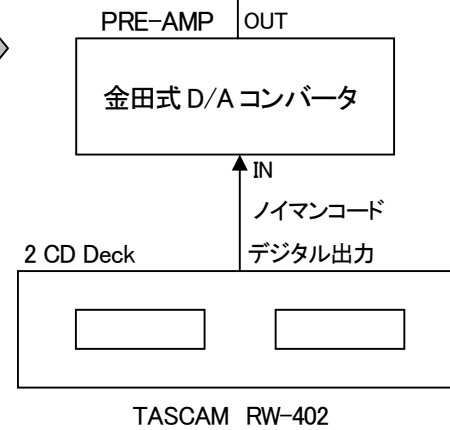

- ＜ 系統 2( CD 再生) ＞
- ① 2 CD Deck (TASCAM RW-402)
  - ↓
  - ② PRE-AMP ( 金田式 D/A コンバータ )
  - ↓
  - ③ MAIN-AMP ( CROWN D45 , CROWN D75A )
  - ↓
  - ④ SPEAKER ( JBL 4348 )